

Revision History

Date	Version	Revision
30/8/2024	1P.01.01.01.42R2	1. Simplify the multi-pulse setup operation, and change the operation mode to manual trigger by default
3/6/2024	1P.01.01.01.41R7	1. Solve the problem of mis-triggering of overvoltage protection when modifying amplitude 2. Optimize the duty cycle measurement solution of the counter
18/3/2024	1P.01.01.01.41R2	The first formal release

Compatibility between Versions

Source Version	Object Version	Compatibility
1P.01.01.01.41R2	1P.01.01.01.42R2	Tested
1P.01.01.01.41R2	1P.01.01.01.41R7	Tested


Update Instructions

WARNING: DO NOT shut off the instrument until the update is completed.


1. Copy the update file (*.ads) to a FLASH type U-disk, and then connect the U-disk to the USB host port of the instrument.



2. Press the **Utility** key on the front panel, and then softkey “System ->Page 1/2 -> Firmware Update”, to enter the interface of the file browser.

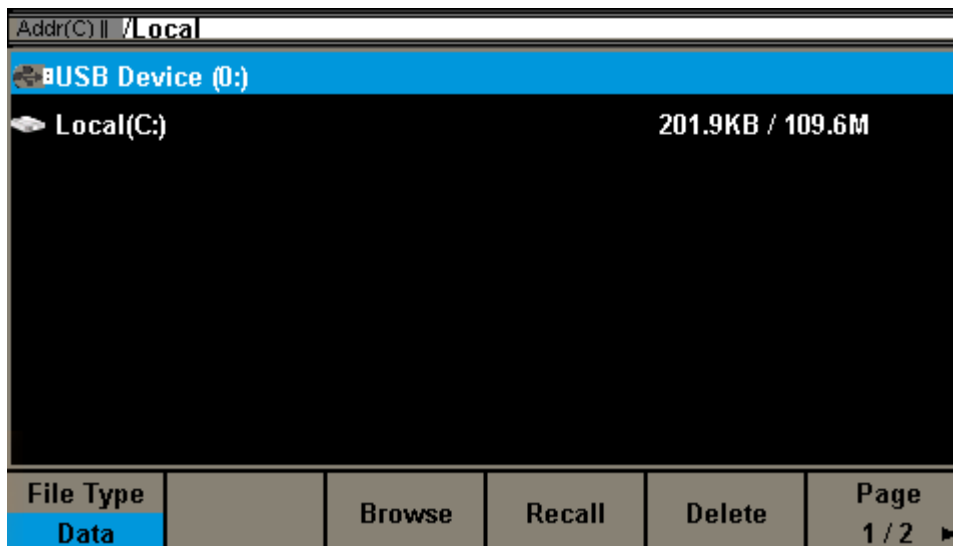

3. Select “ USB Device” thru the knob on the front panel, press “Browse”, and then select the correct ads file using the knob

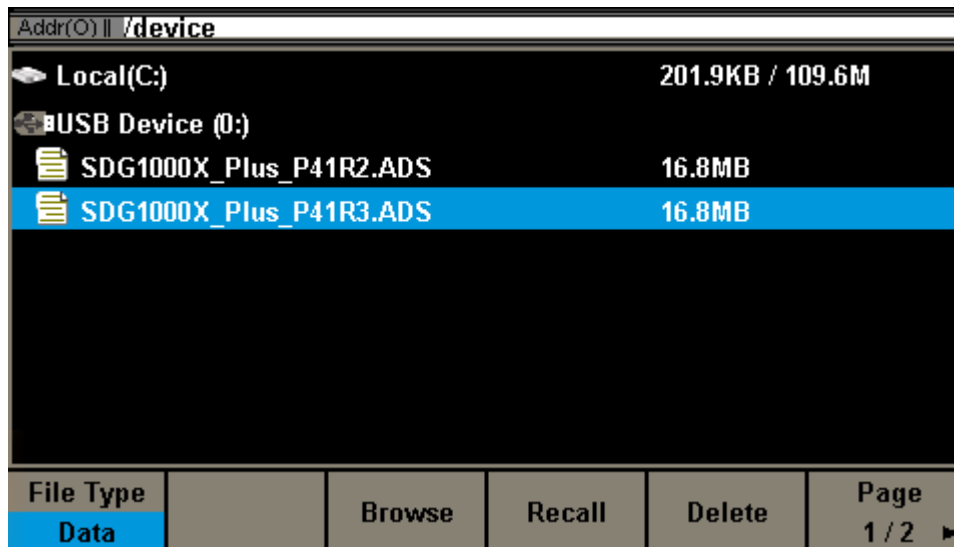

4. Press "Recall" to start the update. A progress bar is displayed during the update. After the update is completed, the generator will restart automatically.

WARNING: DO NOT shut off the instrument until the update is completed.