

How to set the IP address manually on an SPS5000X

January 19, 2022

1. Enter the communications menu by pressing Menu > Rotate knob > highlight Communication > Press knob to select
2. Rotate to highlight LAN > Press knob
3. Press knob to enable the "frame" that indicates you can change the values > select OFF (black background/bright letters indicates the current selection)



4. Now, use the Up/Down arrow button to move down the rows, left/right arrows to move within a selected row, rotate the knob to change values. The position is indicated by an underscore:





North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139

Tel: 440-398-5800

Toll Free: 877-515-5551

Fax: 440-399-1211

info@siglent.com

www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH

Staetzlinger Str. 70

86165 Augsburg, Germany

Tel: +49(0)-821-666 0 111 0

Fax: +49(0)-821-666 0 111 22

info-eu@siglent.com

www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.

Blog No.4 & No.5, Antongda Industrial Zone,

3rd Liuxian Road, Bao'an District,

Shenzhen, 518101, China.

Tel: + 86 755 3661 5186

Fax: + 86 755 3359 1582

sales@siglent.com

www.siglent.com/ens