



## Updating the SPD 3000 firmware

The firmware update for the instrument is upgraded with a fixed name file via PC management software with USBTMC. The upgrade method is below:

### Upgrade in normal Interface

1. Using EasyPower installed on your PC, establish a USB connection to the power supply, verifying the connection on the EasyPower software.
2. Click Version and then choose Upgrade in the drop-down menu to enter the USB firmware upgrade dialogue. See figure 1:

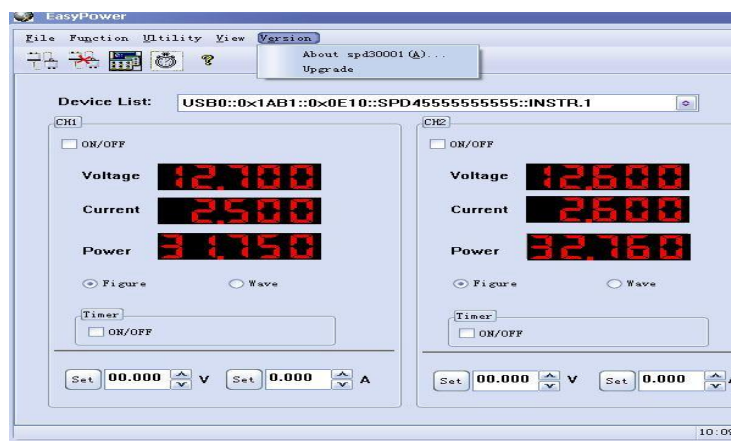



Figure 1

3. Figure 2 shows the firmware upgrade dialogue. Click file choosing icon , and then select the file to be upgraded which must have a file extension type .ugf.

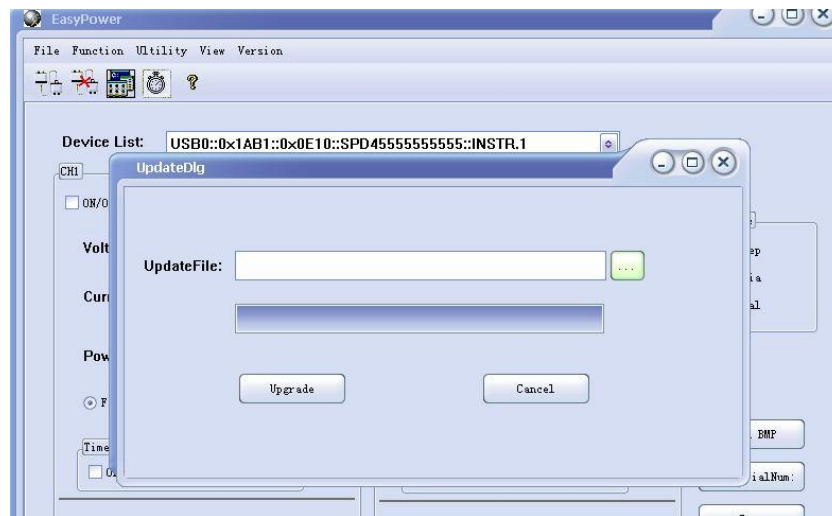


Figure 2



Figure 3

4. As shown in Fig 4, click [Upgrade] button to begin the upgrade. The upgrade is complete when the progress bar is finished. Then you need to restart the system. And now the instrument is ready for use.

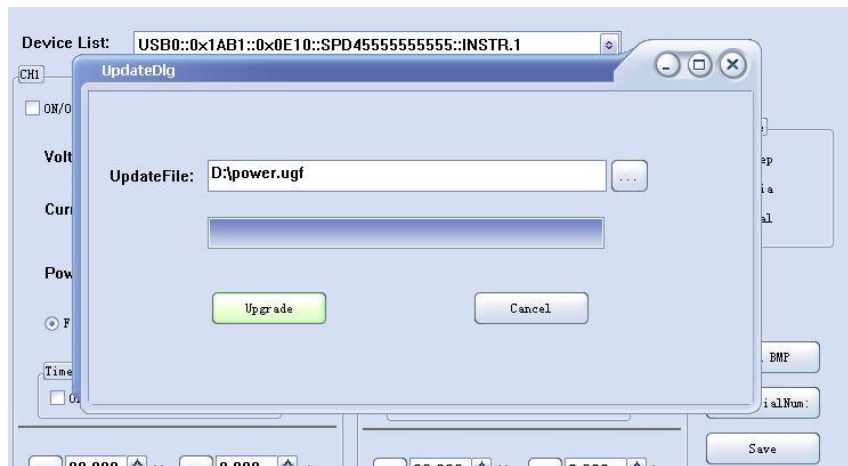


Figure 4