

# EasyDMM First Use


August 27, 2019

SIGLENTs EasyDMM software provides easy instrument control and data collection.



In this note, we will show how to configure EasyDMM for the first time.

1. Download and install EasyDMM. You can find the download instructions and files here: [DMM Software](#)
2. Connect the SDM to the controlling computer or network. The SDMs have USB and LAN connections. In this note, we are using a USB connection
3. Open EasyDMM by clicking on the desktop icon or running the executable from the start menu.


The initial opening screen will show this basic layout:

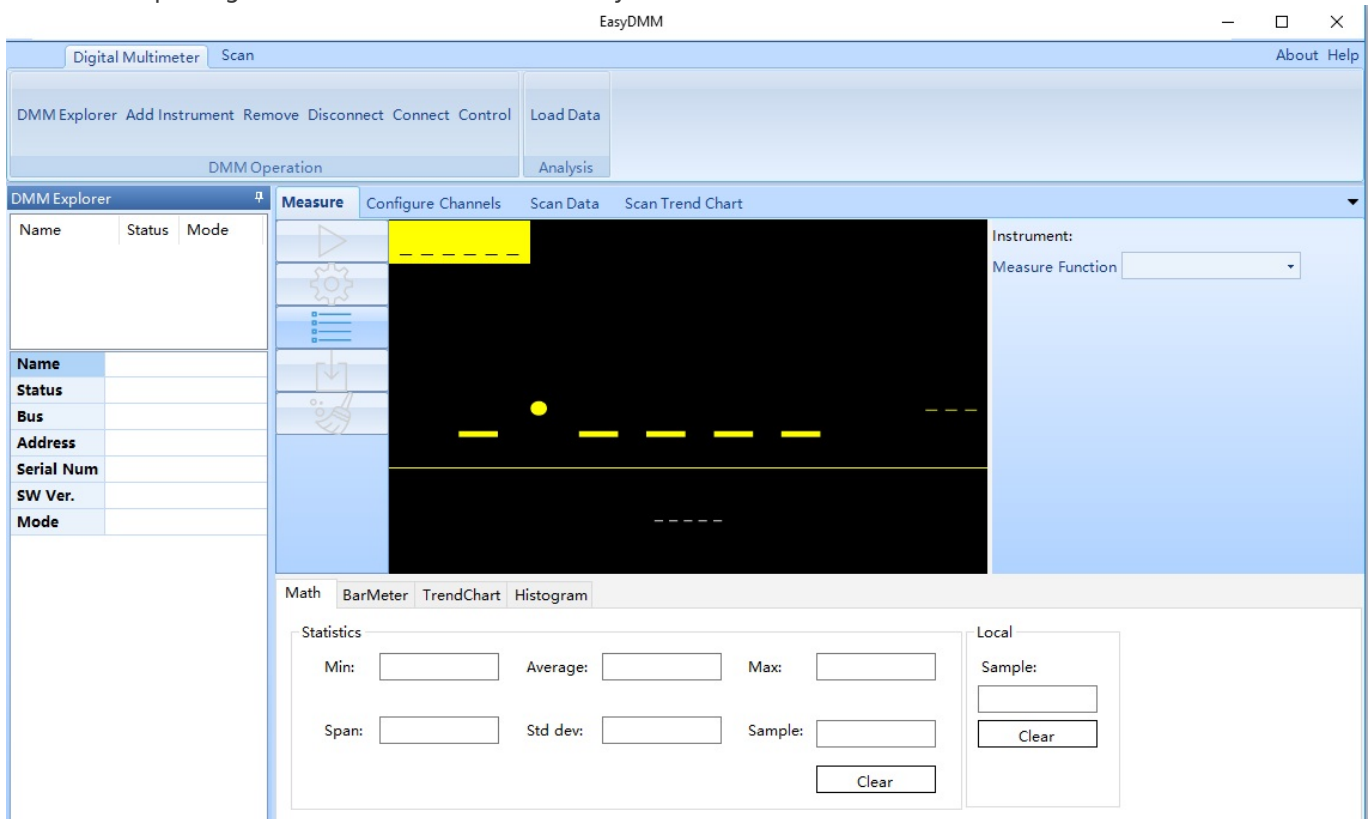

4. Now, click on Add Instrument, select the USB device you wish to control (USBTMC as shown), and click OK:

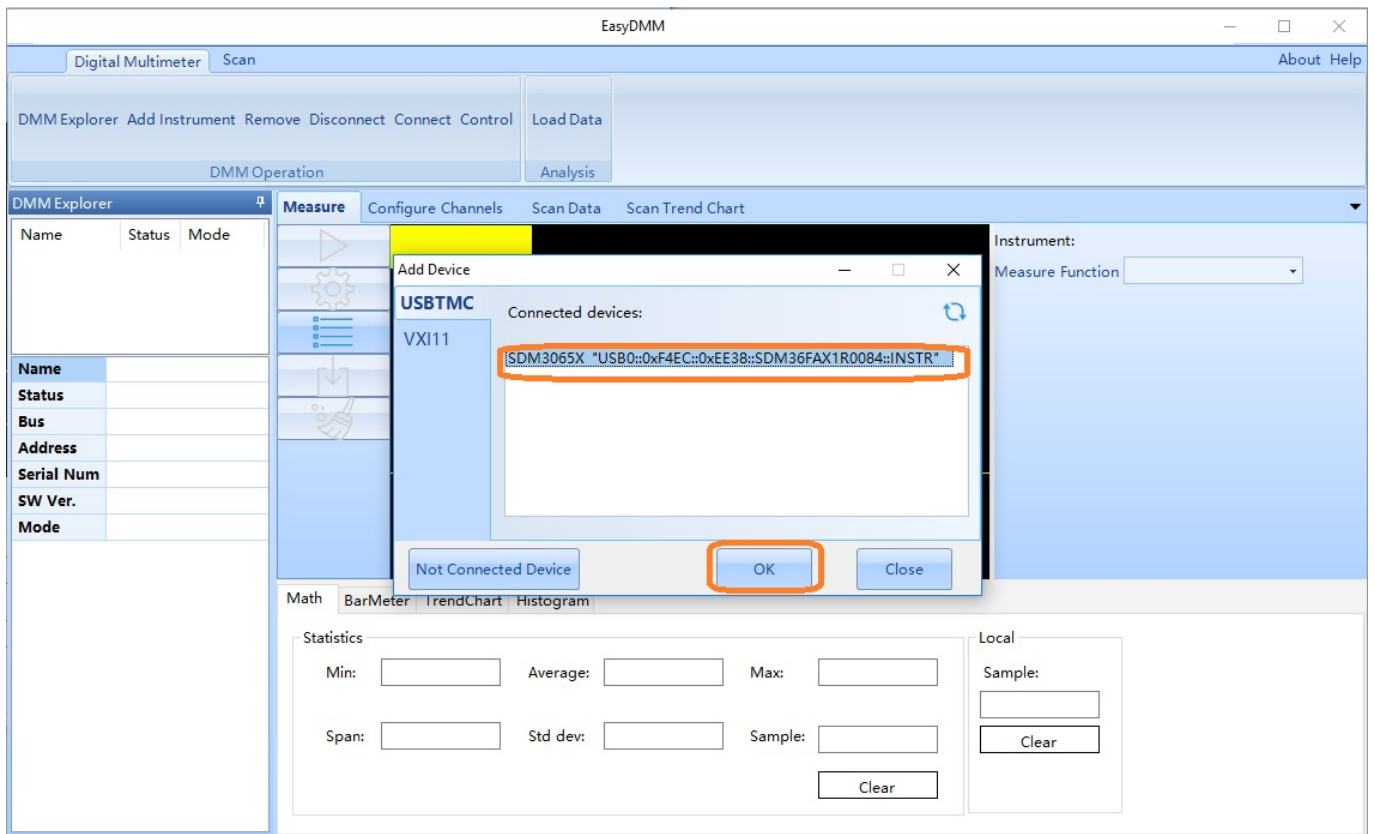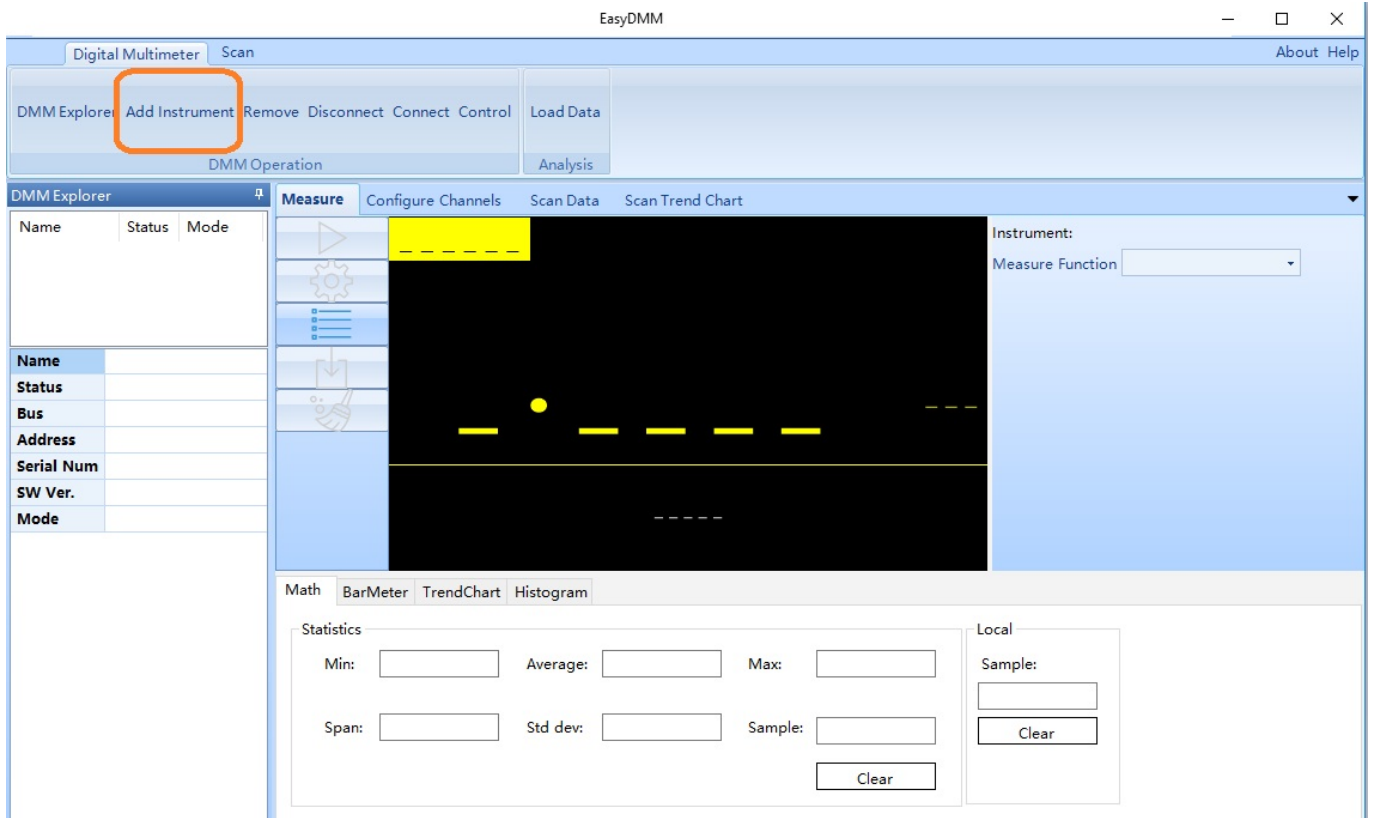


It's ALIVE!!!!

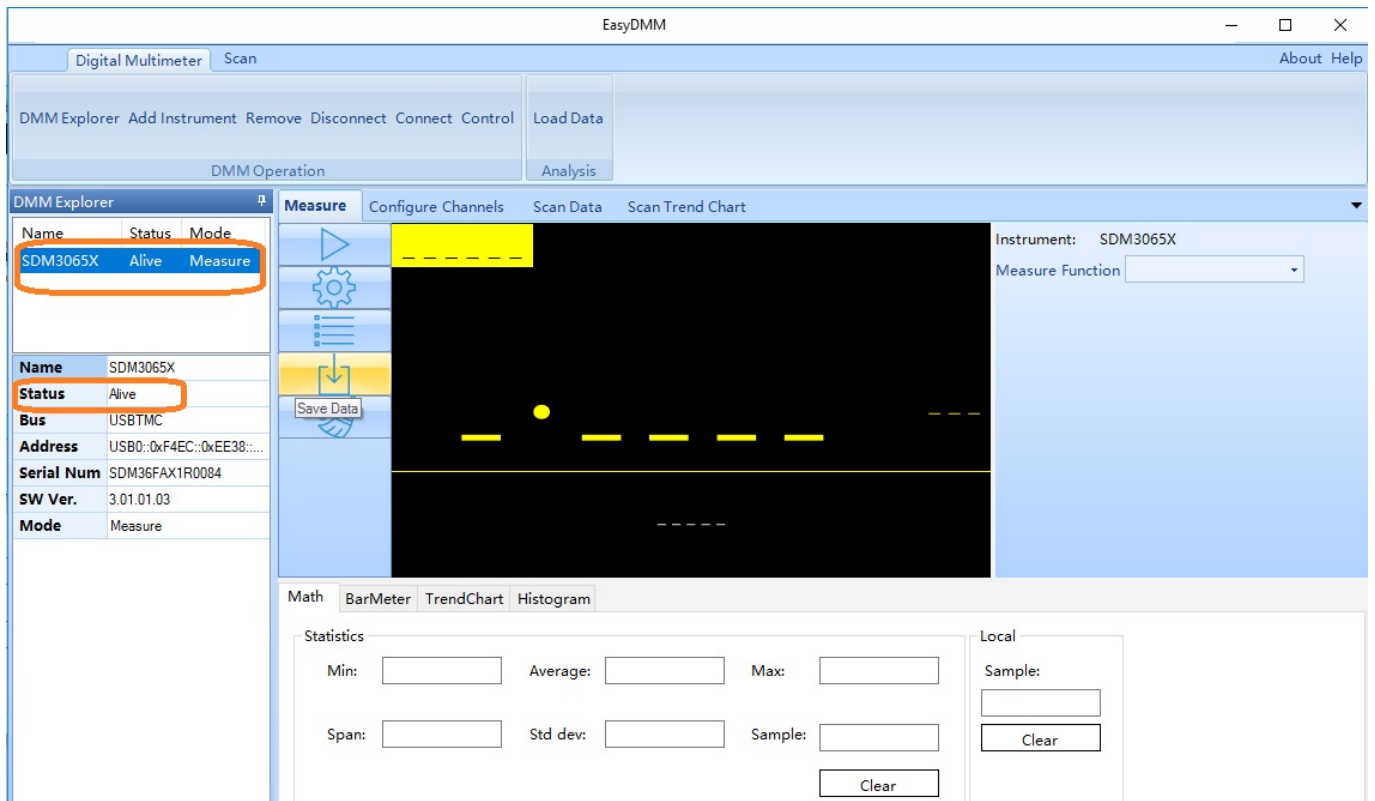


5. Set Mode to Measure:


6.

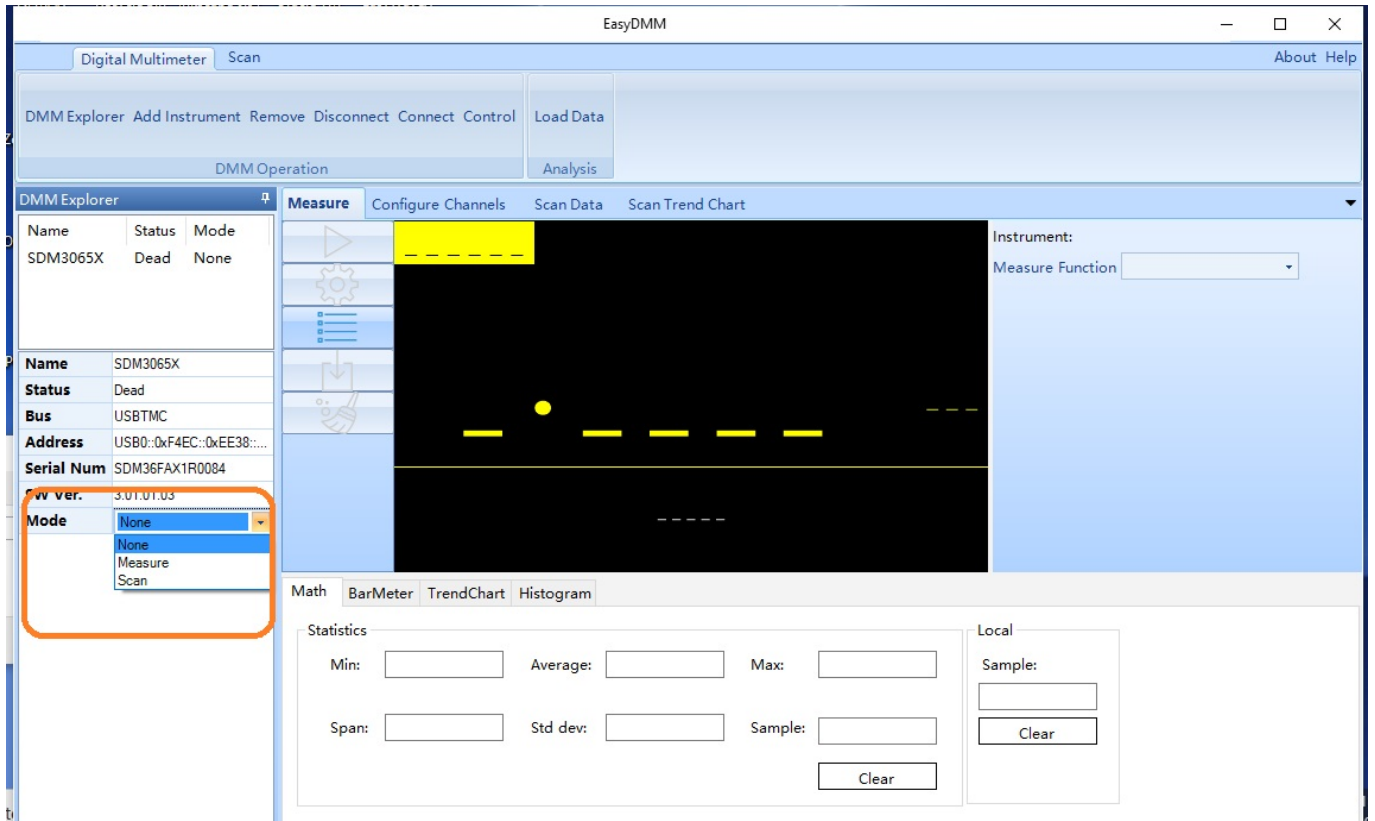

To connect and receive measurements from the instrument, you can click on the “run” button:

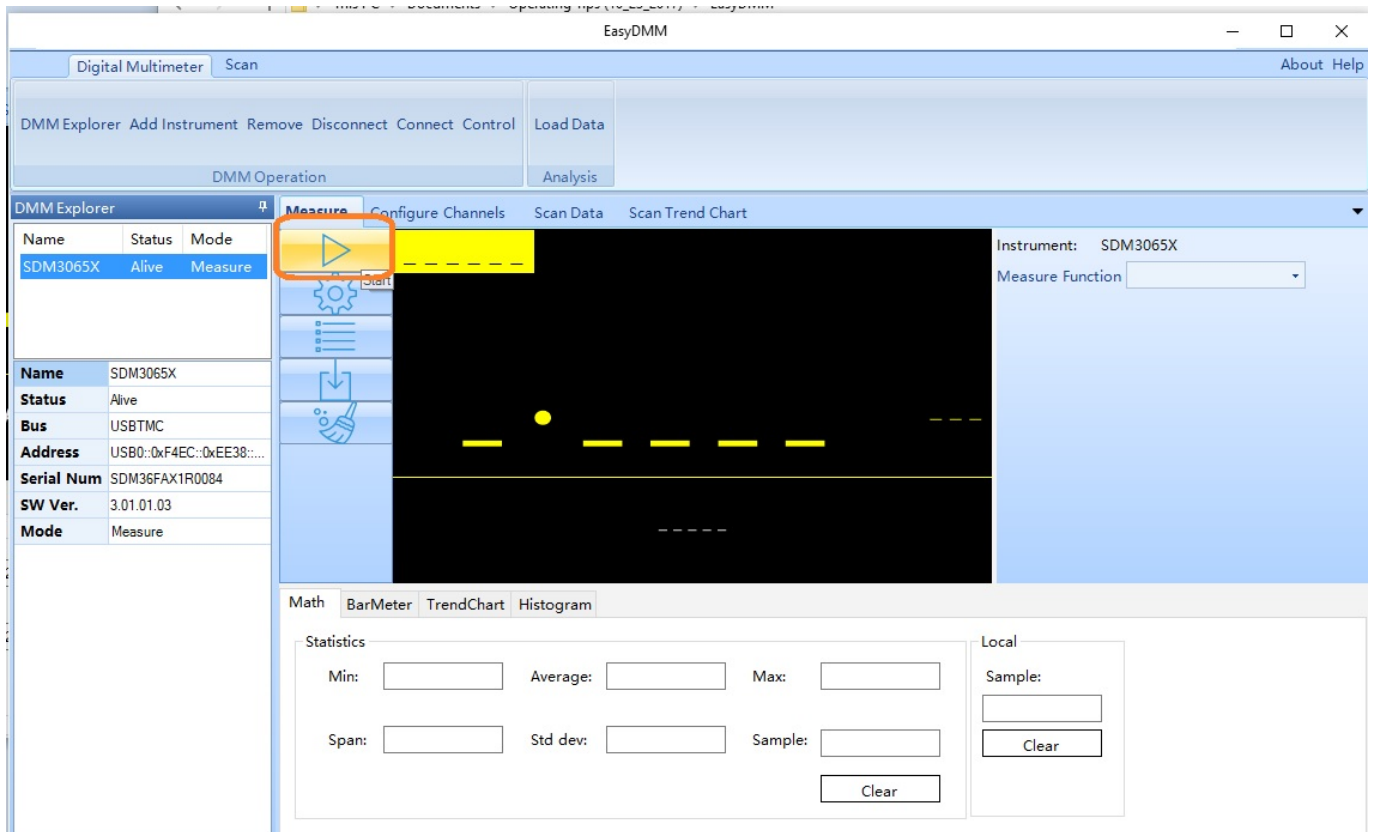

This will update the data on the display:

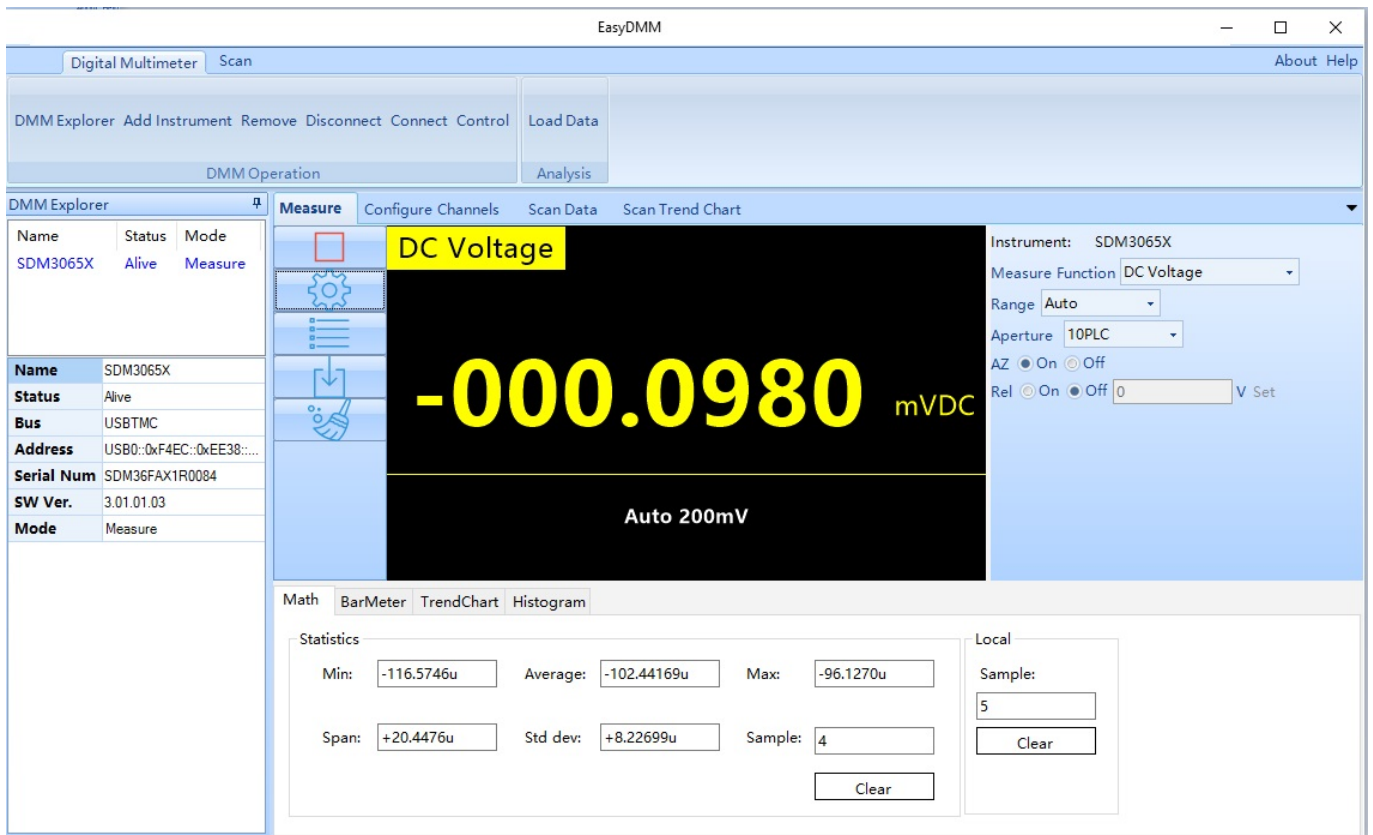

From here, you can adjust the measurement type:

EasyDMM

Digital Multimeter Scan

DMM Explorer Add Instrument Remove Disconnect Connect Control Load Data

DMM Operation Analysis

DMM Explorer

Name	Status	Mode
SDM3065X	Alive	Measure


**Name** SDM3065X  
**Status** Alive  
**Bus** USBTMC  
**Address** USB0::0xF4EC::0xEE38:....  
**Serial Num** SDM36FAX1R0084  
**SW Ver.** 3.01.01.03  
**Mode** Measure

**DC Voltage**  
**-000.1295 mVDC**  
 Auto 200mV


Instrument: SDM3065X  
 Measure Function: DC Voltage  
 Range: Auto  
 Aperture: 10PLC  
 A:  On  Off  
 R:  On  Off

Math BarMeter TrendChart Histogram  
 Statistics  
 Min: -152.3652u Average: -126.01151u Max: -101.6129u  
 Span: +50.7523u Std dev: +9.44880u Sample: 292  
 Local  
 Sample: 14  
 Clear

View Data:

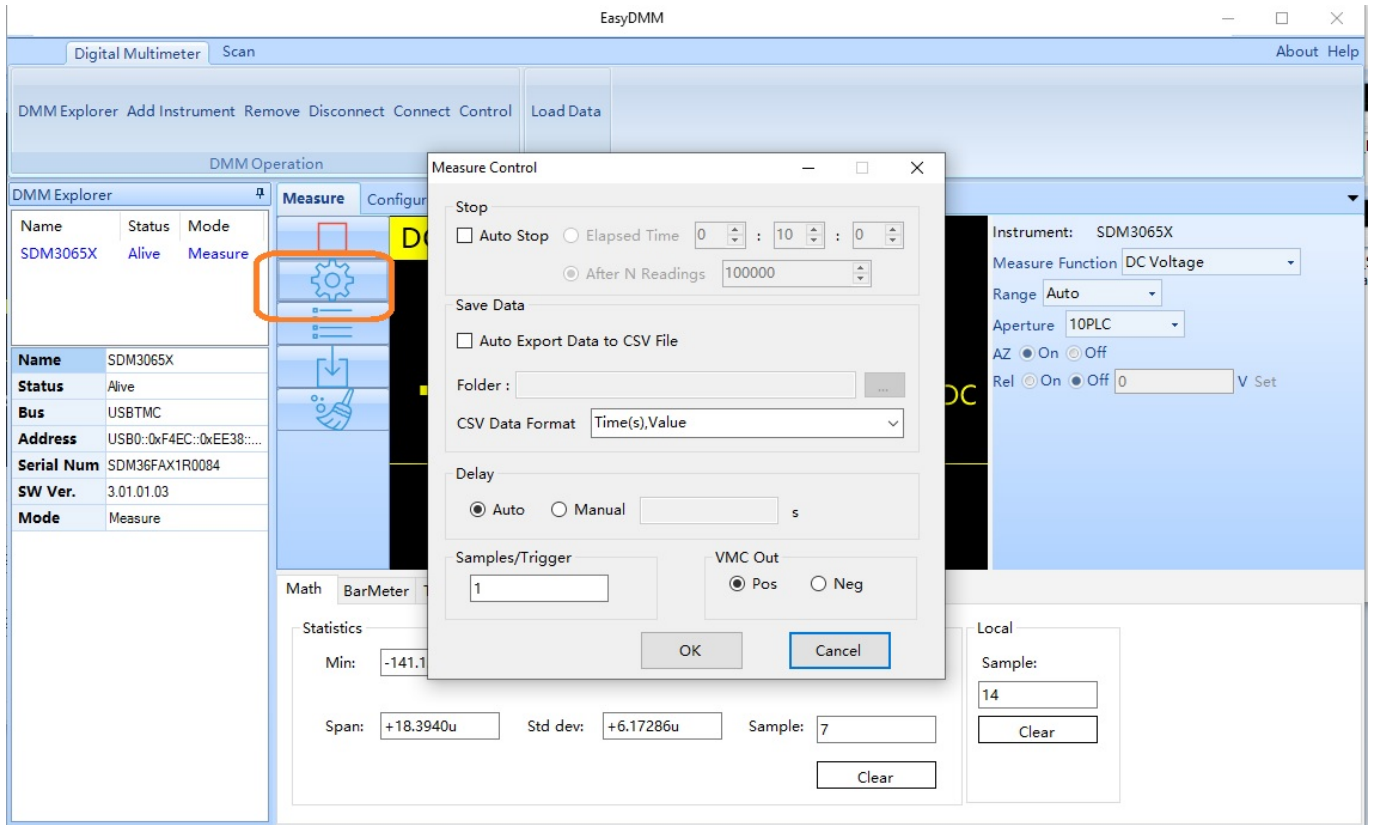

Save Data:

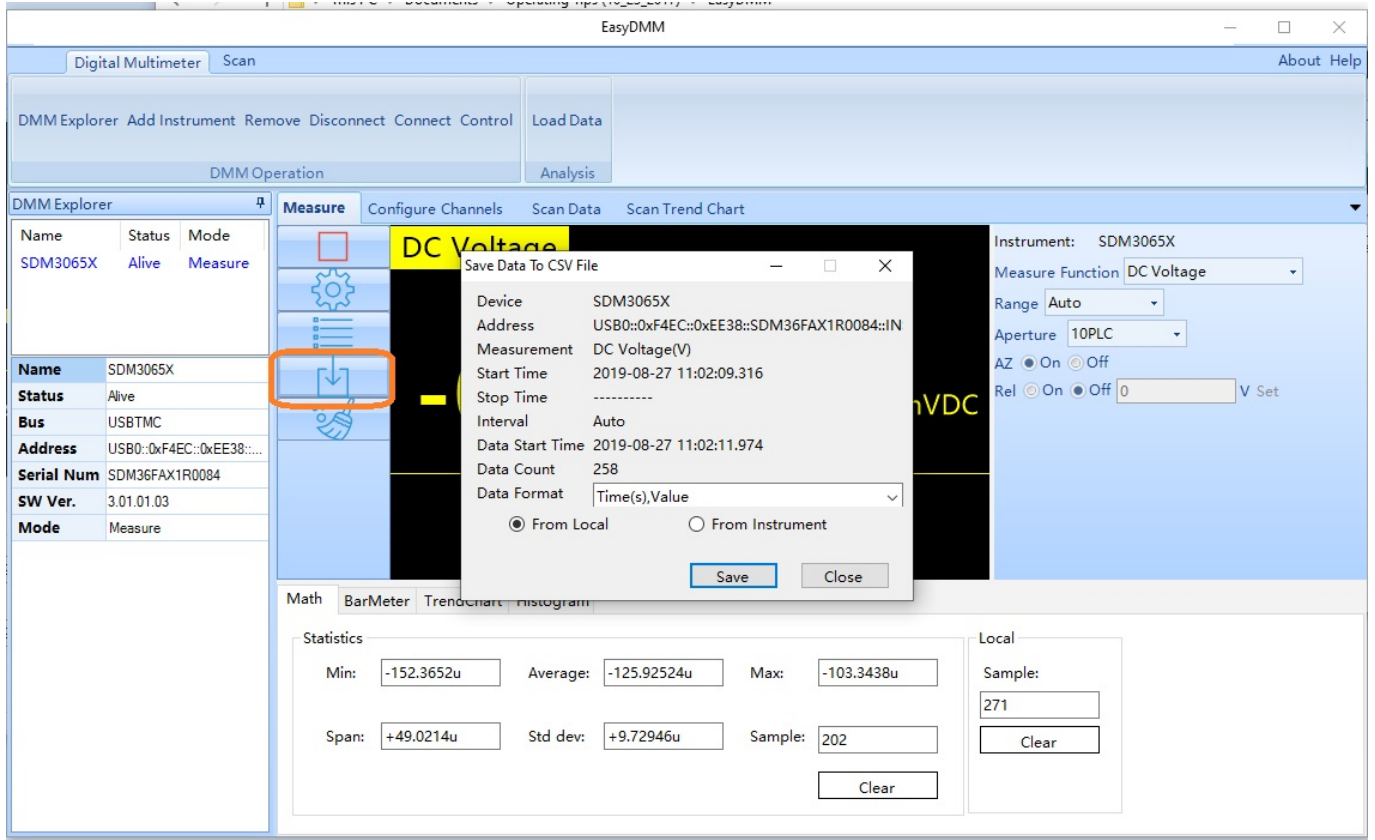

If you have an SDM3055 or SDM3065X with Scan Card (-SC part numbers), there is also a nice note on scanning here: [Configure EasyDMM Scanning](#)





### **North American Headquarters**

SIGLENT Technologies America, Inc  
6557 Cochran Rd Solon, Ohio 44139  
Tel: 440-398-5800  
Toll Free:877-515-5551  
Fax: 440-399-1211  
[info@siglent.com](mailto:info@siglent.com)  
[www.siglentamerica.com/](http://www.siglentamerica.com/)

### **European Sales Offices**

SIGLENT TECHNOLOGIES EUROPE GmbH  
Staetzlinger Str. 70  
86165 Augsburg, Germany  
Tel: +49(0)-821-666 0 111 0  
Fax: +49(0)-821-666 0 111 22  
[info-eu@siglent.com](mailto:info-eu@siglent.com)  
[www.siglenteu.com](http://www.siglenteu.com)

### **Asian Headquarters**

SIGLENT TECHNOLOGIES CO., LTD.  
Blog No.4 & No.5, Antongda Industrial Zone,  
3rd Liuxian Road, Bao'an District,  
Shenzhen, 518101, China.  
Tel:+ 86 755 3661 5186  
Fax:+ 86 755 3359 1582  
[sales@siglent.com](mailto:sales@siglent.com)  
[www.siglent.com/ens](http://www.siglent.com/ens)