

Generating an Activation Code (Option Code)

January 18, 2018

Introduction

Many SIGLENT products have options that can be activated by entering a special activation code into the front panel.

This note covers how to generate the activation code.

Setup

- Contact your Authorized SIGLENT sales office or distributor to obtain an Option Card. This is typically a document that is emailed as a PDF.

A typical Option Card will contain the following information:

Option Card

Thanks for your purchase. The option card info is below. With this, go to the URL below to get the option key and the installation instructions.

URL: <http://service.siglenteu.com/easyweb>

Device type:	SDS1000X-Series Oscilloscopes
Option type:	SDS-1000X-LA
Description:	Embedded 16 Digital Channels(Software) for this Device type product
Card No.:	SDS1000X-mso-12813
Authorized code:	f40ab7d2d766c99c

- Go to <http://service.siglenteu.com/easyweb>

This is the official SIGLENT website for generating activation codes.

service.siglenteu.com/easyweb/



Welcome to activate your software

Thank you for your Siglent product purchase. Please follow the steps below to activate your software.

- Select Device type
- Select Option type
- Enter Serial number
- Enter Authorized code
- Click Submit to get an option key
- Follow the installation instructions for install or click the Download installation instructions button to download the file for later install
- If you only need the installation instructions, please select one Device type then click the Download installation instructions button

Device type:

Option type:

Serial number:

Authorized code:

Option key:

Installation instructions:

- Select the Device Type (Product Model Family)
- Select the Option Type (The option card you purchased)
- Enter the Serial Number of the instrument you wish to add the option to
- Enter the Authorization Code from the Option Card (example circled below).


Option Card

Thanks for your purchase. The option card info is below. With this, go to the URL below to get the option key and the installation instructions.

URL: <http://service.siglenteu.com/easyweb>

Device type: SDS1000X-Series Oscilloscopes
Option type: SDS-1000X-LA
Description: Embedded 16 Digital Channels(Software) for this Device type product
Card No.: SDS1000X-mso-12813
Authorized code: **f40ab7d2d766c99c**

- Press Submit. This will generate the Option Key which can be entered into the instrument and permanently activate the option.

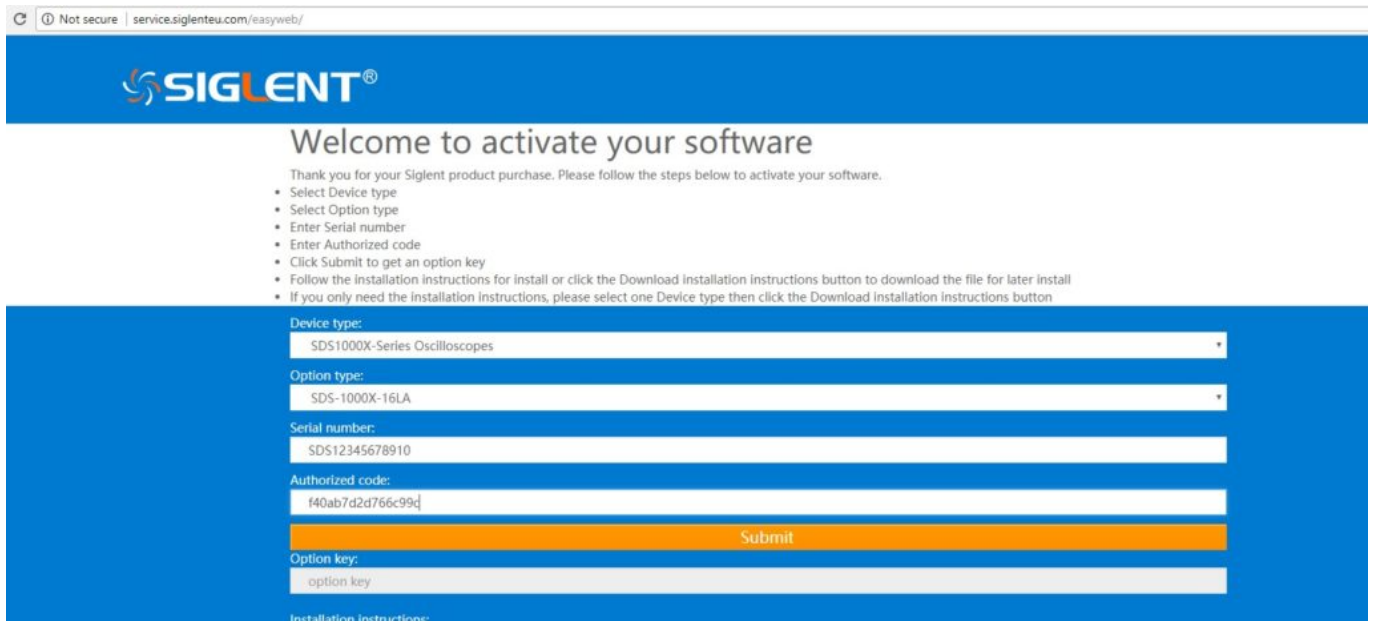

Not secure | service.siglenteu.com/easyweb/

SIGLENT®

Welcome to activate your software

Thank you for your Siglent product purchase. Please follow the steps below to activate your software.

- Select Device type
- Select Option type
- Enter Serial number
- Enter Authorized code
- Click Submit to get an option key
- Follow the Installation instructions for install or click the Download Installation Instructions button to download the file for later install
- If you only need the installation instructions, please select one Device type then click the Download installation instructions button

Device type: SDS1000X-Series Oscilloscopes

Option type: SDS-1000X-16LA

Serial number: SDS12345678910

Authorized code: f40ab7d2d766c99c

Submit

Option key: option key

Installation instructions:

NOTE: See the specific instrument user's manual for instructions on entering option codes



North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139

Tel: 440-398-5800

Toll Free: 877-515-5551

Fax: 440-399-1211

info@siglent.com

www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH

Staetzlinger Str. 70

86165 Augsburg, Germany

Tel: +49(0)-821-666 0 111 0

Fax: +49(0)-821-666 0 111 22

info-eu@siglent.com

www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.

Blog No.4 & No.5, Antongda Industrial Zone,

3rd Liuxian Road, Bao'an District,

Shenzhen, 518101, China.

Tel: + 86 755 3661 5186

Fax: + 86 755 3359 1582

sales@siglent.com

www.siglent.com/ens