

How to enable Log frequency scaling with the SSA3000X

October 25, 2017

The Siglent SSA3000X spectrum analyzer can be configured to display amplitude and frequency with logarithmic (log) scaling.

Vertical (amplitude) scaling on a spectrum analyzer is typically shown in log scaling with dBm as units as a default.

The Horizontal (frequency) scaling is typically linear, but some applications prefer log frequency scaling.

To enable log frequency scaling:

1. Press Span on the front panel
2. Set the X-Scale value to Log

To remotely activate the log scaling, send the following SCPI command:

```
:DISPlay:WINDow:TRACe:X[:SCALe]:SPACing <LOGarithmic/LINear>
```

- LOG sets logarithmic
- LIN sets linear

To query the current horizontal scaling, send the following:

```
:DISPlay:WINDow:TRACe:X[:SCALe]:SPACing?
```

Figures 1 and 2 on the following page show how the change in scale will alter the displayed data and grid lines.

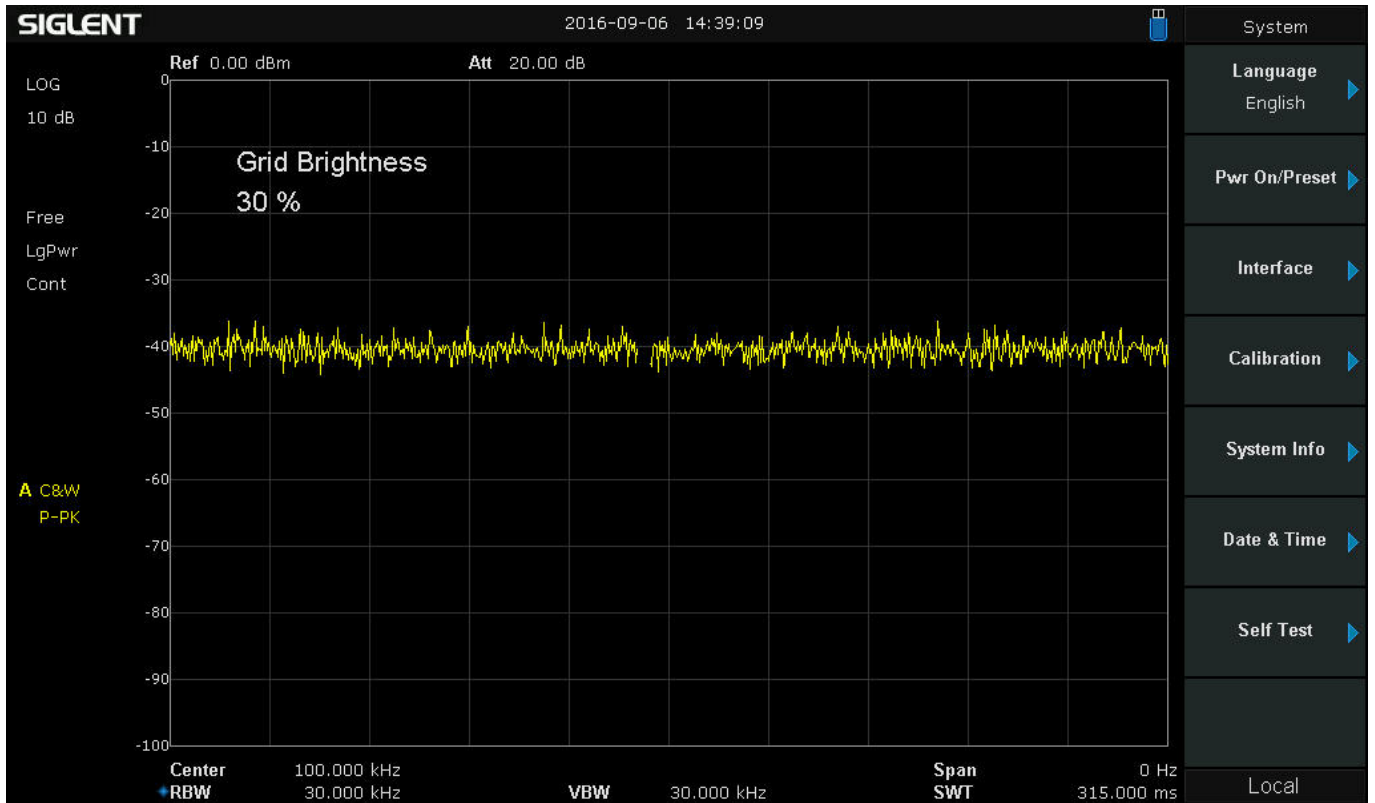


Figure 1: Screenshot of an SSA3000X with linear horizontal scaling.

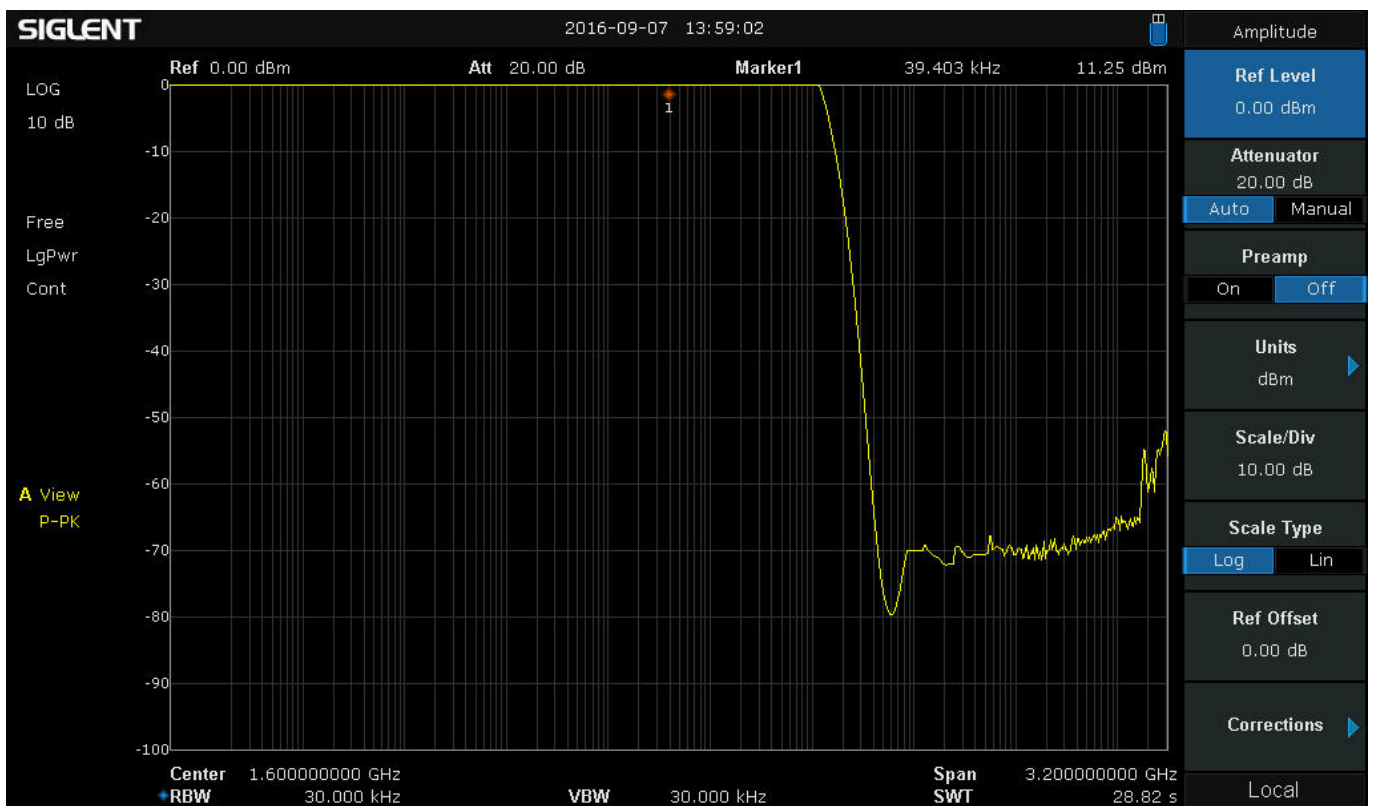


Figure 2: Screenshot of an SSA3000X with log horizontal scaling.



North American Headquarters

SIGLENT Technologies America, Inc
6557 Cochran Rd Solon, Ohio 44139

Tel: 440-398-5800

Toll Free: 877-515-5551

Fax: 440-399-1211

info@siglent.com

www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES EUROPE GmbH

Staetzlinger Str. 70

86165 Augsburg, Germany

Tel: +49(0)-821-666 0 111 0

Fax: +49(0)-821-666 0 111 22

info-eu@siglent.com

www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.

Blog No.4 & No.5, Antongda Industrial Zone,

3rd Liuxian Road, Bao'an District,

Shenzhen, 518101, China.

Tel: + 86 755 3661 5186

Fax: + 86 755 3359 1582

sales@siglent.com

www.siglent.com/ens